



# Simple & Easy Installation

Integrated Security – Access Control













Easy Setup With **Checklist Prompting** 



Send IP Alarms Via The Multipath-IP Network

Inception is an integrated access control and security alarm system with a design edge that sets it apart from the pack. Aside from its modern and sleek looks, Inception's software is built directly into the controller so the only tool you will need is a web browser.

With a step by step commissioning guide and simple interface, Inception is easy to install, easy to use and outstandingly powerful in its class.







# Web Powered Convenience

With Inception there is no need to install software on a computer, no need to leave a computer on site and no issues with software/firmware compatibility. Instead, the installation process is as simple as powering up the controller, connecting the network cable and using any current web browser to navigate to Inception's web page. Here you will find everything you need to set-up, commission and operate the entire system.

End users can conveniently use any existing computer, tablet or smartphone to control their Inception system via the fully featured user interface.

# **Easy To Program & Easy To Commission**

Inception's web interface features an industry-first interactive Commissioning Checklist that guides the technician through the commissioning process. When followed from start to finish, the configuration process can be completed efficiently in a logical way, minimizing the risk of missing important configuration settings.

Technicians can commission a system with confidence, knowing that they have covered everything, from core programming, to custom automation, changing default credentials, backing up the database and downloading a commissioning report, without missing a step!

Inception's programing screens are presented in a simplified manner with unnecessary options out of view. The programming screens are concise and easy to navigate with built-in context-based help to provide on-screen detailed information to the installer.

# Universal Inputs & Outputs Provide Access Control And Security Monitoring Directly From The Controller

The Inception controller features 8 inputs and 4 relay outputs on-board. These inputs and outputs are truly universal. A mix of EOL (end of line) inputs and standard button/switch inputs can be used independently of each other, while the 4 relay outputs can be used to directly control door locks, powered siren modules or connect and control any device of your choice.

For example, using Inception's built-in RS-485 reader port, up to 8 SIFER card readers or 8 Wiegand readers via Inner Range OSDP-Wiegand converters can be connected and used in conjunction with the 4 relay outputs to provide access control for four doors with read in and out control. The 8 inputs can then be used to connect PIRs or door position switches for security alarm purposes.

# **Expanding Inception**

Inception allows for expansion via its on-board RS-485 LAN port. Keypads, access control modules and input/output expanders can be added to increase Inception's scope up to 128 doors, 1024 inputs and 1024 outputs.



# **Flexible Automated Responses**

The Inception controller contains configuration options for many of the commonly used automatic responses in Intrusion and Access Control systems. These could be tasks like turning on an output linked to a strobe during an area alarm for example, or turning on an output linked to a buzzer if a door is left open too long.

If more advanced or custom functionality is required, then Automated Actions are key. These would most often be simple automation cases such as turning on the lights when an area is disarmed, but have the flexibility to handle the very complicated scenarios that a client may dream up.

Automated actions are broken up into two parts; the trigger condition and the action responses. The trigger determines when actions should occur, while the action responses determine which actions to perform when the trigger condition becomes valid, and which actions to perform when it becomes invalid. These action responses can control the basic items in the system like outputs, areas and doors, but can also control the feedback tones on individual SIFER readers or siren devices.

The trigger for an action goes beyond the simple "Door is Unlocked/Locked" or "Area is Armed/Disarmed" cases, allowing doors to also trigger when opened, closed, locked out, forced, held open too long, or almost held open too long. Areas are also more advanced, allowing entry or exit mode, alarm active, input activity or many other states to trigger an action. Input, output and time period states can also be used as a trigger.

These flexible trigger conditions allow a wide variety of actions to automatically be performed in response to a wide variety of scenarios. Adding the ability to group many trigger conditions together into the one action wraps a very powerful feature into a very simple package.







# **Security Alarm & Intrusion Detection**

Inception is a fully featured intrusion detection system capable of monitoring up to 1024 detection points with powerful security monitoring features, which tightly integrate with Inception's access control function.



# **Access Control**

Inception is a powerful access control system capable of providing physical access for up to 128 doors and 256 card readers, or 32 elevator cars. The access control system provides logical and clever integration with the security alarm function.





# **Automation**

Inception's universal inputs and outputs can be used for monitoring and automated actions and control of systems such as lighting, air conditioning and many other systems. Convenient control is provided via Inception's web-based interface giving you convenient and flexible control directly from a tablet or smartphone.



# **Multiple Devices**

The Inception web interface is responsive, meaning that the layout of the interface is automatically adjusted to suit the device you are using to access it. This keeps Inception's navigation and controls easy to follow, regardless of which device is being used for access.





# **IP Alarm Transmission**

Inception is designed for the modern age of alarm transmission, and is equipped with IP alarm communication functions straight out of the box. Inception can be connected and monitored via its on-board ethernet connection using the Inner Range Multipath-IP system.



# **No Software Required**

With the web-based software interface being built directly into the Inception system controller, there is no need to install security management software onto a separate computer. This provides a quick and hassle-free installation process and outstanding convenience for daily operation and control. It also eliminates any chance of software/hardware version clashes.



# Integration

Inception features powerful integration options for use with Milestone and Hanwha video surveillance systems as well as ELAN and Control 4 Home Automation systems. Integration with the ELAN and Control 4 allows flexible control and synchronization of security, access control, inputs and outputs from either system.

Inception also features a powerful 3rd party automation interface to allow custom integration with many building automation and control systems. Inception also features a REST-based integration API that allows 3rd party applications to integrate directly, via a high level interface to provide User Management, Live Item State & Item Control.



# **Easy Commissioning**

Inception features an industry-first 'Commissioning Checklist'. The checklist is an interactive guide for the installer, taking them through all the items that need to be programmed and tested in a logical order. This ensures that the Inception system is programmed and installed both quickly and accurately.





# **Access Control**

#### **Door Held Open**

Detect if doors have been held open for too long. Warn locally with buzzers first, but if nothing changes, then escalate with notifications and alarms.

#### **Dual Credential Access**

Require both a card and a PIN for higher security locations or for after-hours access.

#### **Live User Locations**

Track user locations as they move through a building. Automatically run and e-mail Muster reports in an emergency or view a live interface to ensure everyone gets to safety.

#### **Elevator Control**

Grant user permissions to floors, schedule free access times and update user locations with button feedback.

#### **Anti-Passback**

Prevent sharing of access cards or ignoring access rules where accurate user location is important. Warn or deny on violations, and automatically forgive after time to minimize inconvenience.

#### **Door Interlocking**

Flexible configuration supports many scenarios, from simple airlocks through to safety environments, like limiting access if active machinery or hazardous substances are on the other side of the door.



# **Intrusion Detection**

#### **Multiple Areas**

Have granular control over the security of your site. Support multiple offices with one system or keep important areas secure during the day.

#### **Auto-Arming**

On a schedule or after inactivity, ensure areas are secure when no one is there.

# **Pre-Arm Health Check**

Verify the health of the system and that all inputs are closed before arming for the night. See a list of problems to fix, such as doors or windows to close, to ensure the site is secure.

# **Many Detector Types**

Detect and notify about a wide range of events. Alert and warn about smoke, user duress, medical, emergency, environmental alarms and others.

# **Residential Mode**

Enable residential area mode to secure a building in Full, Perimeter or Night modes.



# **Integrated System**

#### **Unlock on First Access**


Unlock the front door automatically during working hours, but only if someone has arrived and disarmed the system.

#### **Door Alarm Monitoring**

Alert if a door is forced (opened without being unlocked), or notify if a door has been held open too long.

# **Three-badge Arming**

Easily arm the system by presenting a card three times at a reader.

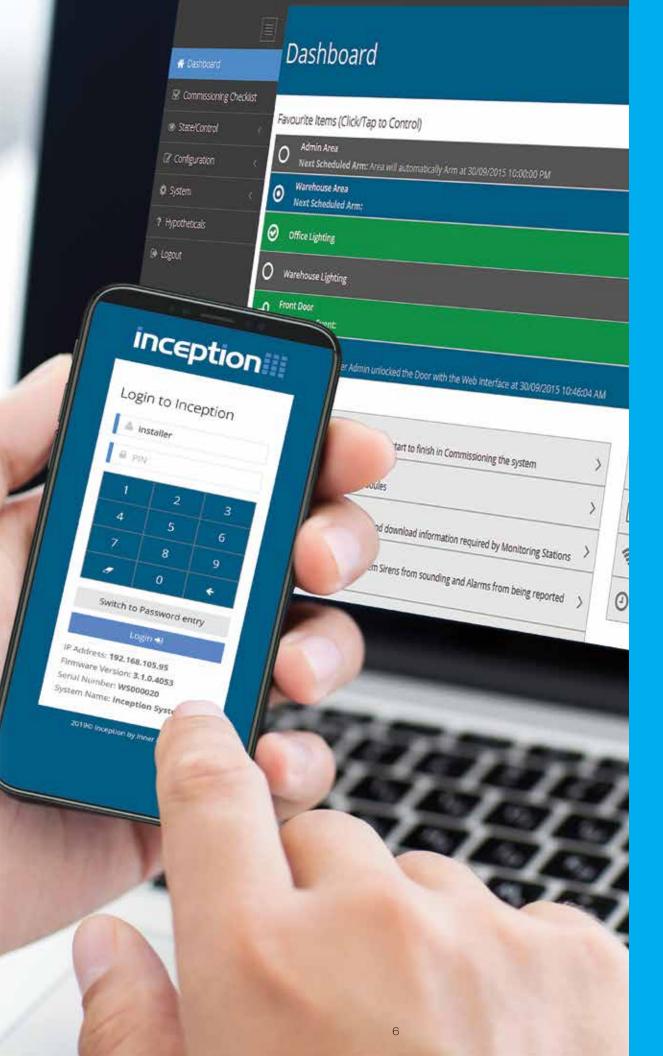





#### **SkyTunnel Makes Connectivity Simple**

SkyTunnel is a cloud based service provided by Inner Range to deliver hassle-free connections of security system hardware and software over the internet. With Inception's built-in SkyTunnel connection, having security alarms monitored and accessing Inception's web interface via the Internet is a straight-forward process. All data is kept private and access to the site is locked thanks to SkyTunnel's secure SSL/TLS encrypted communications and authentication. All that is needed is an active internet connection.

#### **Access Inception Securely via the Internet**


With a SkyTunnel connection in place, accessing the Inception controller is as easy as opening a web page and entering the controller's web address. Inception's web page is designed to be responsive, meaning that you can use the device of your choice, be it a computer, tablet or smartphone. Provided your device has a connection to the Internet, you can access Inception from any place at any time, with the protection of a secure connection\*. To access Inception via SkyTunnel, simply scan the QR code on the Inception controller or enter the web address into your browser and you're up and running.

\*The path from device through to the Inception controller is secure, with an AES encrypted connection between Inception and SkyTunnel, and HTTPS between SkyTunnel and the browsing device. Directly connecting to Inception over the Internet instead of via the SkyTunnel service is also possible, however setup of this is likely to require advanced configuration of your internet router by an IT professional and may not be as secure.

## **Reliable Alarm Monitoring**

Monitoring alarms via Inception's SkyTunnel connection is just as convenient. Inception can be monitored by any central station offering monitoring services for Inner Range's Multipath-IP alarm transmission system. The Inception controller only needs access to the internet via ethernet and once established setting up alarm monitoring is quick and easy using the SkyTunnel connection service.\*\* Alternatively Inception is also able to report alarms to any monitoring station using the Contact ID reporting format. This reporting option requires the Inception USB PSTN Dialer Modem (P/N: 999031), which allows Inception to report alarms through an analogue phone line or via a 3rd party GSM communicator that supports Contact ID Dialler capture.

\*\*Requires a monthly monitoring plan to be in place with your security installer or monitoring station

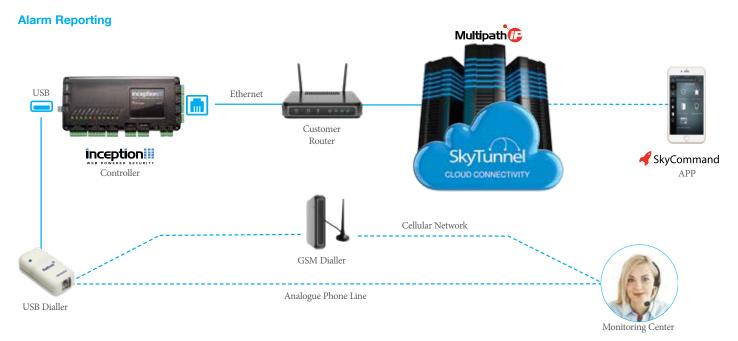



#### **Firmware Updates**

Firmware updates for the Inception Controller are regularly released, adding new features to the product, enhancing existing features or fixing any issues as they are discovered. Each release is packaged with comprehensive release notes that explain everything there is to know about the new features or enhancements that are added, or the issues that have been resolved.

If the controller has a connection to SkyTunnel, it can know as soon as a new firmware release occurs, prompting with a "New Firmware Available" link at the top of the screen. From here, release notes can be downloaded from the controller to the browsing device to see what is new and the firmware can be pulled onto the device directly from SkyTunnel.

After a controller firmware update, it is important that all supporting modules and peripherals are also up to date. Inception takes care of this by highlighting any modules or peripherals that are out of date and by pre-packaging along all of the latest firmware files for each device, ready to be sent over the RS485 LAN.

All of this can occur directly from the controller's web interface, with no need to hunt down each device's firmware and manually upload to the controller, however this is still an option if desired!

# **Free Online Training**

web account.

Training is not a requirement to install the Inception product. The Commissioning Checklist and the detailed on-screen help is able to guide a new technician through their first use of the product. However, for those wanting extra information, self-paced online training is available via the Inner Range website.

All that is needed is an Inner Range

Training takes a look at the controller, RS485 LAN modules including wiring information and accessories, along with connectivity and installation information to get up and running. From there, a detailed programming scenario is worked through, resulting in a fully configured system.


# **Detailed On-Screen Help**

Standard industry terminology and Inner Range terminology combine with plain English to create a product that tries to be as accessible as possible, regardless of a technician's background in the industry.

However, a technician's experience can be wide-ranging; a veteran who has seen it all, a new player picking up their first controller, or a specialist in Access Control, Security, or Automation looking to branch out. Creating a system to suit everyone's level of experience is no easy task.

No matter what a technician's experience level is with the product, Inception provides comprehensive, context specific help text throughout the web interface. Each web page has a page description at the top that can be expanded from a single sentence to generally at least 4 paragraphs of text, describing what the page offers and how to use the page. Each edit item has a tool tip icon next to it that when clicked, shows a popup with generally at least 2 paragraphs of information, describing what the option does, why it does it, where it should be used, considerations to take when setting the option and any other options it affects.

If there is any doubt about what a feature or option does, there is detailed help close at hand.

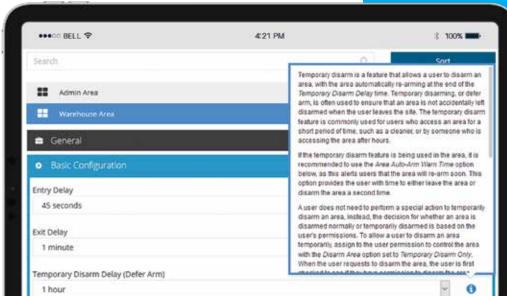



# **Smartphone Control**

Controlling and managing an Inception system on the go has never been easier. The SkyTunnel connection delivers the Inception web interface straight to a mobile device's web browser, automatically resized and adjusted to fit the device. Nothing is missing when compared to a computer's display, making remote control or maintenance of a system as accessible as possible.

The free SkyCommand smartphone app\* simplifies control of the system even further. The app allows quick system arming and disarming, controlling of outputs and viewing of live events with just a few taps of the screen. The app is also capable of controlling many Inception or other Multipath-IP devices, removing the need for a client to keep track of multiple devices; instead, they are all at their fingertips.

\*Requires subscription

#### **Email Notifications**

Inception is capable of sending notification messages via email using clear, easy to read language. Configuration of notifications is incredibly flexible, allowing different users to be notified about different events at different times.

Users can be notified about almost any type of event. For example, the system can be configured to send notifications whenever an alarm occurs in a particular area or access to a particular door is granted or denied. Notifications can also be sent when repeated failed login attempts are made on the web interface or Keypad, or if programming changes are made to particular entities. Maintenance events, such as power and battery issues can also be communicated.

When multiple events need to be sent to a single user, they are consolidated into a single e-mail message. This prevents the flooding of messages to the user's mailbox. Inception can be configured to send emails using a local or public SMTP server.

# **Push Notifications\***

Inception push notifications are sent to smart devices using the SkyCommand app, which is free to download for Android and iOS devices and can be installed on as many devices as necessary. Push notifications can be configured to be sent in response to area arm and disarm events, area alarm and restore events and system alarms for the Inception controller.

In addition to push notifications, SkyCommand provides convenient control of the security system.

\*Requires subscription



**Detailed live status** 



Interactive control of whole site



# **SkyCommand Dealer Portal**

Never before has it been more convenient for an installation company to remotely manage their customers ongoing security needs. Introducing the SkyCommand Dealer portal by Inner Range. The SkyCommand Dealer portal offers the perfect place for installation companies to manage all of their Inception devices.

# **Field Technicians**

The secure and intuitive interface allows a field technician to view live event logs, utilize live diagnostics and access Inception web interfaces remotely from a tablet or smartphone. Site names and notes can be updated per-device, making searching for a specific client or system a breeze.


## **Installation Company**

Devices can be enrolled or pre-enrolled with a monitoring center to simplify the signup process when commissioning a new site. Adding and editing app users and their permissions can be done by any staff member without prior in-depth knowledge of the system. The suite of subscription services offered, such as interactive control and notifications, are a powerful addition to the product offering.

Combining all of these tools in one place can streamline and enhance both the initial installation and ongoing maintenance processes for a company's clients.





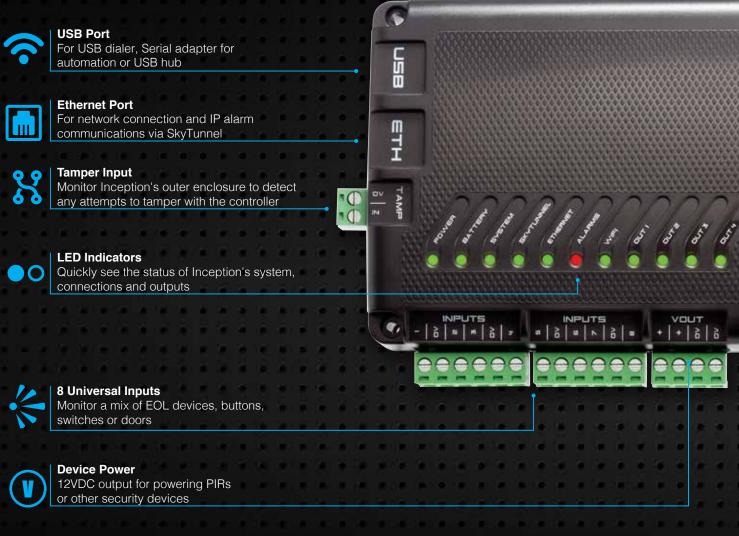



# **RS-485 LAN Expansion Port**

Add LAN expansion modules to Inception including keypads, input/output expanders, access control modules and wireless fobs and detectors

System Capacities

	On-board Inception Controller	With LAN Expansion
Doors	4*	128
SIFER Readers	8	256
Wiegand Readers	8**	128/256***
Areas	96	96
Inputs	8	1024
Outputs	4*	1024
Elevator Cars	32	32
Users	10,000	10,000
Events	250,000	250,000


<sup>\*</sup>The Inception controller has 4 relay outputs in total.

These can be used as lock relays for doors or general purpose dry contact outputs.

<sup>\*\*</sup> Via 8 OSDP-Wiegand converters.

<sup>\*\*\* 256</sup> Wiegand readers requires a combination of OSDP <> Wiegand converters and 127 Standard LAN Access Modules.


# Simple Plug and Play Technology

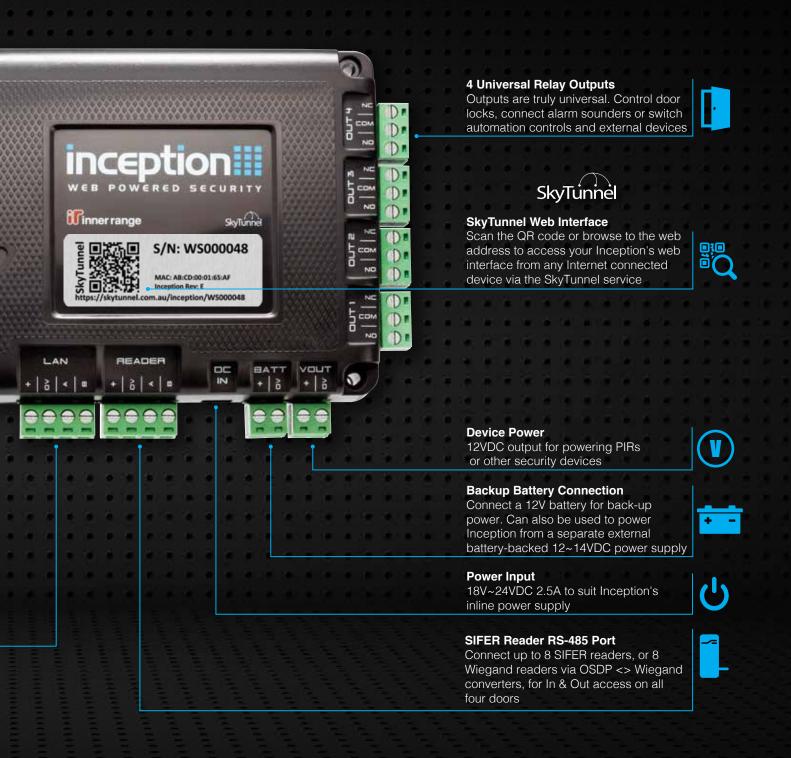





# Four Door Access Control System

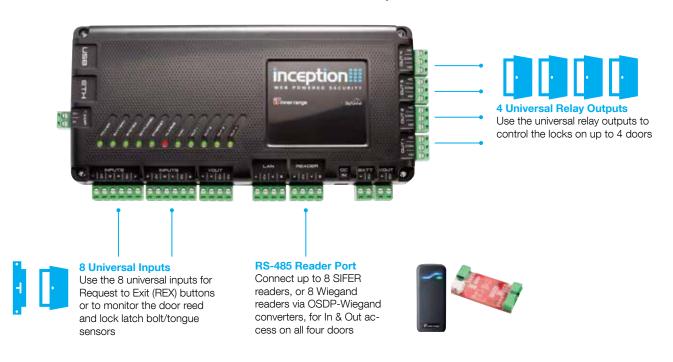

# Eight Zone Security System



#### **IP-Alarms over Ethernet**

Use Inception's Ethernet port to send IP alarms to Multipath-IP equipped monitoring stations or report alarms via the optional USB Dialer



# Deployment Examples

# Integrated Access Control and Security System

Example showing 2 access controlled doors with 4 inputs used for general intrusion detection



#### **IP-Alarms over Ethernet**

Use Inception's Ethernet port to send IP alarms to Multipath-IP equipped monitoring stations or report alarms via the optional USB Dialer





# **4 Universal Relay Outputs**

Use 2 of the universal relay outputs to control the locks on 2 doors and connect 12V alarm sounders, strobe lights or switch external devices with the remaining outputs



#### 8 Universal Inputs

Use 4 of the universal inputs for REX buttons or to monitor the door reed and lock latch bolt/ tongue sensors, while using the remaining 4 to monitor any mix of EOL devices, buttons, or switches

# **RS-485 Reader Port**

Connect up to 8 SIFER readers, or 8 Wiegand readers via OSDP-Wiegand converters, for In & Out access on all four doors



# Inception with LAN Expansion Modules



#### **IP-Alarms over Ethernet**

Use Inception's Ethernet port to send IP alarms to Multipath-IP equipped monitoring stations or report alarms via the optional USB Dialer







# **4 Universal Relay Outputs**

Outputs are truly universal. Control door locks, connect alarm sounders or switch automation controls and external devices





Monitor a mix of EOL devices, buttons, switches or doors

# **RS-485 LAN Expansion**

Add RS-485 LAN modules and Keypads to Inception to increase the system capacity up to 128 doors, 256 readers, 1024 inputs and 1024 outputs




Connect up to 8 SIFER readers, or 8 Wiegand readers via OSDP-Wiegand converters, for In & Out access for door locks connected directly to the controller



RF Expander





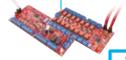

EliteX Keypads Standard LAN Access Modules (SLAM)




8 Input/Output



#### **Standard LAN Access Module**

The Standard LAN Access Module (SLAM) is used to control and monitor up to 2 doors on Inception's RS-485 LAN. Connect up to 4 Inner Range SIFER readers to accommodate entry and exit readers on both doors. Alternatively, 2 Wiegand readers may be connected to allow control of a single door with entry and exit readers or two doors with a single reader each. Programming options allow for each reader to be configured independently and security area control to be integrated with access control where required.

The SLAM features 4 dedicated inputs and outputs for each door including lock and DOTL (Door Open Too Long) relays. The outputs and inputs are flexible – in particular, outputs can be given DOTL, valid, invalid, beeper, generic output and follow door state behavior. Similarly, inputs can be given reed, latch bolt/tongue, REX, breakglass or generic detector/switch behavior. The door contacts and/or tongue sense inputs are utilized to provide "door forced" and "door open too long" alarms.

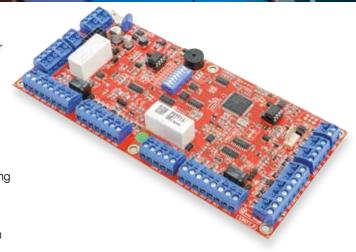

Cache functionality is also provided via the on-board database, which provides offline access for up to 10,000 user cards if communications to the Inception controller are lost.

The power supply requirements are 11 to 14VDC and a range of Inner Range plug-on external 2Amp, SMART 3Amp or SMART 8Amp switch mode power supplies are available. The SMART power supplies are fully monitored via the SLAM module.

#### 996012PCB&K

Standard LAN Access Module (PCB & Accessories)

#### **OSDP-Wiegand Converter**

The OSDP-Wiegand Converter is a small inline device that can operate in two main modes that can open up many new options when determining and designing a site's hardware requirements.

#### Option 1: Connect Wiegand readers to OSDP ports

Via the Converter, a Wiegand reader can now be connected to an OSDP port. This allows Wiegand readers to make use of many of the benefits that an OSDP reader bus provides:

- 128bit AES encrypted communication path
- 4-core cables to the module, while still offering beeper, valid and invalid LED control
- Longer cable runs
- More flexible wiring configurations (for example, daisy-chaining readers together for a single run back to the module).

In practice, this allows up to 8 Wiegand readers to be connected directly to an Inception controller, allowing read-in and read-out abilities on up to 4 doors without extra hardware, which is perfect if upgrading an existing site with access control to Inception. In addition, two extra Wiegand readers can be connected to SLAMs, again allowing read-in and read-out abilities on both doors of a SLAM.

The advanced control that Inception offers for a Wiegand reader's beeper and valid/invalid LEDs are also available when connected to the OSDP-Wiegand converter. This allows numerous area events like arm success or failure, entry delay, exit delay, alarm and area arm warning, or door events like door unlocked and held open too long to make use of the built in Wiegand reader beeper and LEDs to provide feedback to users.


#### Option 2: Connect OSDP readers to Wiegand reader port

Via the Converter, OSDP readers such as Inner Range SIFER readers or other products can now be connected to existing Wiegand reader ports. This allows SIFERs, for example, to be used in preparation for a site upgrade.

When used in conjunction with an Inception system, it allows non-SIFER OSDP readers to be connected to SLAMs, allowing sites with existing OSDP readers to be changed to an Inception site.

#### 994200

OSDP-Wiegand Converter

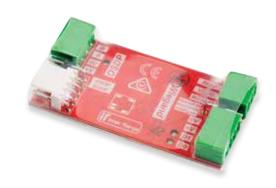



#### SIFER Smart Card Reader

The SIFER card reader is a Smart card reader designed and manufactured by Inner Range. It is a multi-drop RS-485 connected reader that employs 128 bit AES encryption from the card through to the door module, providing a far superior level of security than that of traditional Wiegand based card readers. SIFER readers utilize the MIFARE® DESFire® EV2 card format.

SIFER allows the color scheme of the indicator LEDs to be customized according to the sites requirements. The internal beeper is used to provide audible feedback to indicate valid access, access denied and other event or warning sounds.

Up to 8 SIFER readers may be connected to the RS-485 reader port on the Inception controller and up to 4 may be connected to the Standard LAN Access Module (SLAM).

SIFER's bus interface allows all of the readers to be connected via just one cable. With a single connection to the controller, time and money is saved through the reduced need for cabling.

SIFER readers are IP67 rated and can be configured with site specific encryption keys. The SIFER reader is available in two versions: The standard SIFER which will only read SIFER cards, and the Multi-Format SIFER which can read SIFER cards and also the Card Serial Number (CSN) of other smart cards such as MIFARE® and iClass.

The SIFER Keypad model offers all of the options and benefits of the standard SIFER reader, while allowing PIN numbers to be entered. This allows a door to be configured for Card and/or PIN access from a single IP67 rated reader.



SIFER Keypad Smart Card Reader

# SIFER Cards & Fobs

The SIFER-P, pre-programmed 'stock' cards have more than four billion card numbers available, each SIFER-P card is guaranteed to be unique

#### SIFER READERS

994720 SIFER Smart Card Reader 994720MF SIFER Smart Card Multi-Format Reader 994725 SIFER Keypad/Smart Card Reader 994725MF SIFER Keypad/Smart Card Multi-Format Reader

#### **ISO CARDS**

994610 SIFER-P ISO CARD DESFire® EV2 4K ISO - (Pre-programmed - Printed)
994580 SIFER-P ECOLITE ISO CARD - (Pre-programmed - Printed)

#### TAGS

**994621P** SIFER-P TAG DESFire<sup>®</sup> EV2 4K ISO - (Pre-programmed - Printed)

#### **WRIST BANDS**

994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO - (Pre-programmed - Printed)



ISO Card







# **Inovonics RF Expander**

The Inner Range – Inovonics™ RF Expander is an RS-485 LAN based module which provides an interface for Inovonics™ wireless security transmitters such as detectors, universal transmitters and user pendants.

Up to 32 detectors can be monitored by each module. User pendant transmissions can be received via any RF Expander Module in the system. The range of an RF system can be expanded by using Inovonics™ Repeater units which allow RF signals to be forwarded onto the expander module.

Transmitters can be simply registered into Inception using the 8-digit decimal serial number found on each device.

#### 996008

Inovonics RF Expander





# Wireless RF Expander Module

The Inner Range - Paradox RF module is a cost-effective wireless RF solution that connects to Inception's RS-485 LAN and allows Paradox Magellan wireless PIRs, reed switches, smoke detectors, remote control fobs and emergency pendants to function with the Inception system.

Paradox remote control fobs can be used to arm or disarm the Inception system with ease and can provide bi-directional audible and visual feedback for arming. Custom actions can be assigned to the fob buttons to provide convenient wireless control at the touch of a button. In addition to this, the REM 2 has an information button which can be used to indicate the current status of the security area.

Additionally, each RF module will provide 32 wireless detection inputs. Low battery supervision and reporting is provided for all wireless input devices.

Inception supports the following Paradox wireless devices:

- Remote Controls, Fobs & Emergency Pendants (Excludes REM3)
- Motion Detectors
- Wireless Door Contacts (Reed Switches)
- Smoke and Glass Break Detectors

#### 995025

RF Module Paradox (433Mhz)









#### 8 Input LAN Expander

The 8 Input LAN Expander module can be connected directly to Inception's RS-485 LAN to provide an additional 8 zone inputs, 2 auxiliary outputs and 2 siren drivers. Each 8 Input LAN Expander can be expanded up to 32 inputs or 32 outputs using plug-on UniBus expansion devices.\* This flexible expansion design allows the Inception system to be expanded up to a total of 1024 inputs and outputs.

\*Limited to 32 inputs and 26 outputs or 24 inputs and 32 outputs at the same time.

The 8 Input LAN Expander's power supply requirement is 11 to 14VDC. SMART 3Amp or SMART 8Amp switch mode power supplies are available. The SMART power supply is fully monitored via the 8 Input LAN Expander module.

#### 996005PCB&K

8 Input LAN Expander Module (PCB & Accessories)



The UniBus 8 Input Expander connects directly to an 8 Input LAN Expander (host module) via the UniBus Port. It provides an additional 8 inputs along with extra detector power supply connections (DET+) to simplify device wiring.

The UniBus 8 Relay Expander is designed for installation within the same tamper protected enclosure as its host module. The UniBus device is connected directly to the host module or another UniBus device via the UniBus patch cable supplied. Up to 3 UniBus 8 Input expanders can be connected to one 8 Input LAN expander.

#### 996500PCB&K

UniBus 8 Input Expander (PCB, Patch Cable & Accessories)


#### **UniBus 8 Relay Expander**

The UniBus 8 Relay Expander connects directly to an 8 Input LAN Expander (host module) via the UniBus Port. It provides 8 independent, high-current normally open or normally closed relay outputs, offering a general purpose interface for switching devices such as strobes, buzzers, building automation and process control.

The UniBus 8 Relay Expander is designed for installation within the same tamper protected enclosure as its host module and can be connected directly to the host module or another UniBus device via the UniBus patch cable supplied. Up to four UniBus 8 relay expanders can be connected to one 8 Input LAN Expander.

#### 996515PCB&K

UniBus 8 Relay Expander (PCB, Patch Cable & Accessories)

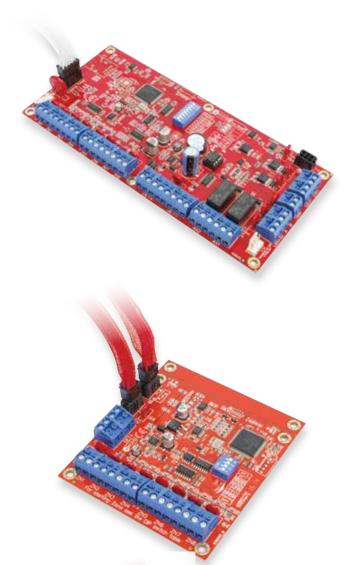




## **Elevator Integration**

Low-level elevator integration to Inception involves the wiring of outputs in the Inception system to elevator buttons in an elevator car, allowing the individual buttons to be enabled or disabled by the Inception system. Then, a user is able to present their card at a reader located in the elevator car and based on their permissions, certain floor selection buttons can be enabled. In addition, the elevator buttons can also be wired into inputs in the Inception system, allowing Inception to know which button a user pressed.

Buttons in elevator cars can be configured to enable automatically on a schedule, allowing free access to floors at certain times of the day. This behavior can also be manually overridden by the end user, letting them set floors to free access, secured or locked out if they have the correct permissions. Security area integration is included, where elevator floors can be associated with areas, preventing free access to that floor if the area is armed. In addition, if button feedback is available, the area can be automatically disarmed when the user selects it. Or if they do not have permission to disarm the area, they can be denied access until an authorized user accesses the area first, preventing them from walking into an armed area that they cannot control.

The elevator integration can also be used to provide other security related functions, such as locker control, car garages or storage units. This could allow a single reader to unlock one or more lockers or a specific roller door based on which user presented their card.

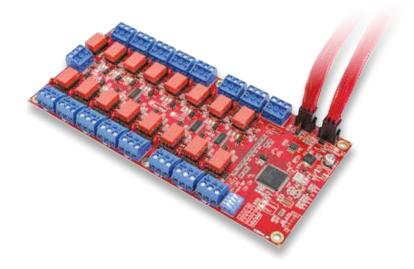

#### The UniBus Elevator Button Interface

UniBus 16-Floor Elevator Interface device provides an efficient integration between the Inception System and an elevator system. This facilitates managed and secure floor access for users within multi-storey buildings and apartment blocks. The UniBus Elevator Interface device utilizes a low-level button feedback interface between Inception and the elevator system. It incorporates input conditioning and switching to provide the isolation required between the two systems.

Using a UniBus cable, the device connects directly to an 8 Input LAN expander, (UniBus Host) and up to 6 UniBus 16-Floor Elevator Interface devices can be connected to a single host module to service up to 96 elevator buttons with button feedback.

# 996540PCB&K

UniBus 16 Floor Elevator Interface device



#### **EliteX LCD Keypad**

The EliteX LCD keypad is elegantly designed and features a clear and easy to read OLED display. Users can use the keypad to perform typical operations on the Inception system. This includes control of security areas, door access, event activity review and controlling the state of outputs. User's PIN numbers can also be changed directly from the keypad. The OLED LCD display shows plain text navigation through operations and alarms, events and items are presented by name.

EliteX can also be used by the installer to access a limited range of Inception's configuration options. The keypads 8 indicator LEDs can also display a real-time status of the security system.



111

SOT TO

#### 995400

EliteX Keypad

#### **Enclosure for the Inception Controller**

The UL compliant Inception Enclosurers are universal sturdy metal enclosures designed for general purpose installation of Inception Controllers, UniBus Devices and LAN Modules.

The flexible design allows for a range of equipment to be fitted in various custom configurations to meet many installation requirements. The low profile side elevation protrudes less than 3.35" (95mm) from the mounting surface.

#### 995201NA

Medium Enclosure (enclosure only)

## 995201PSNA3

Medium Enclosure with SMART 3Amp Power Supply

#### 995204

Widebody Encloser (enclosure only)

Enclosure	Width	Height	Depth
Medium	14.10" (358mm)	18.12" (460mm)	3.35" (85mm)
Widebody	20.17" (512mm)	23.43" (595mm)	3.74" (95mm)





Full technical data sheets for products featured on this page are available from the Inner Range website.

Inception Controller		
Revision		
Section   Biltex Keypad   Inception Accessories		
Inception Accessories  999028 DIN Rail Mounting clips to suit Inception Controller  999031 USB PSTN (Dialer) Modem  999032 USB Hub for Inception  Access Control Expansion Modules  996012PCB&K Standard LAN Access Module (SLAM)  995916 Fire Door Release – Relay Board/Power HUB  Card Readers & Cards  994200 OSDP-Wiegand Converter Device  994720 SIFER Smart Card Reader  994720 SIFER Smart Card Reader – Multi Format Version  994725 SIFER Keypad/Smart Card Reader – Multi-Format Version  994725 SIFER Keypad/Smart Card Reader – Multi-Format Version  994726MF SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards  994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed)  994610 SIFER-P ESFire® EV2 4K ISO - (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996508PCB&K UniBus 8 Input Expander  996003 Inovonics RF Expander  Mireless Expanders  995008 Paradox RF Expander  100 PS ACCESS Paradox PEXPAND PS Kit		
DIN Rail Mounting clips to suit Inception Controller		
999031 USB PSTN (Dialer) Modem 999032 USB Hub for Inception  Access Control Expansion Modules 996012PCB&K Standard LAN Access Module (SLAM) 995916 Fire Door Release – Relay Board/Power HUB  Card Readers & Cards 994200 OSDP-Wiegand Converter Device 994720 SIFER Smart Card Reader 994720 SIFER Smart Card Reader – Multi Format Version 994725 SIFER Keypad/Smart Card Reader 994725 SIFER Keypad/Smart Card Reader 99475MF SIFER Keypad/Smart Card Reader 99475MF SIFER Keypad/Smart Card Reader 99475NAU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards 994610 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 99461 SIFER Tags 994621P SIFER-P DESFire® EV2 4K ISO - (Pre-programmed – Printed) SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed) Input & Output Expanders 996005PCB&K UniBus 8 Input LAN Expander 996505PCB&K UniBus 8 Relay Expander 996515PCB&K UniBus 8 Relay Expander 996008 Inovonics RF Expander  996008 Inovonics RF Expander  LAN Management Devices		
USB Hub for Inception		
Access Control Expansion Modules 996012PCB&K Standard LAN Access Module (SLAM) 995916 Fire Door Release – Relay Board/Power HUB  Card Readers & Cards 994200 OSDP-Wiegand Converter Device 994720 SIFER Smart Card Reader 994720 SIFER Smart Card Reader 994725 SIFER Smart Card Reader – Multi Format Version 994725 SIFER Keypad/Smart Card Reader - Multi-Format Version 994725 SIFER Keypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards SIFER ISO Cards 994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed – Printed) SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed) SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed) Input & Output Expanders 99600SPCB&K UniBus 8 Input Expander 996515PCB&K UniBus 8 Relay Expander 996515PCB&K UniBus 8 Relay Expander 996008 Inovonics RF Expander  100 SIFER Expander 100 SIFER Expander 100 SIFER SIFER-P Expander 100 SIFER SIFER-P Expander 100 SIFER SIFER-P Wristbander 100 SIFER SIFER-P Wristbander 100 SIFER Wristbands 100 SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed) 100 SIFER Wristbands 100 SIFER SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed) 100 SIFER Wristbands 100 SIFER SIFER Wristbands 100 SIFER SIFER Wristbands 100 SIFER SIFER Wristbands 100 SIFER SI		
996012PCB&K Standard LAN Access Module (SLAM) 995916 Fire Door Release – Relay Board/Power HUB  Card Readers & Cards 994200 OSDP-Wiegand Converter Device 994720 SIFER Smart Card Reader 994720MF SIFER Smart Card Reader – Multi Format Version 994725 SIFER Keypad/Smart Card Reader 994725MF SIFER Keypad/Smart Card Reader – Multi-Format Version 994750AU SIFER Keypad/Smart Card Reader – Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards 994800 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed – Printed) SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders 996005PCB&K 8 Input LAN Expander (UniBus Host) 996515PCB&K UniBus 8 Relay Expander 996515PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus 8 Relay Expander 996008 Inovonics RF Expander  996008 Inovonics RF Expander		
996012PCB&K Standard LAN Access Module (SLAM) 995916 Fire Door Release – Relay Board/Power HUB  Card Readers & Cards 994200 OSDP-Wiegand Converter Device 994720 SIFER Smart Card Reader 994720MF SIFER Smart Card Reader – Multi Format Version 994725 SIFER Keypad/Smart Card Reader 994725MF SIFER Keypad/Smart Card Reader – Multi-Format Version 994750AU SIFER Keypad/Smart Card Reader – Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards 994800 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed – Printed) SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders 996005PCB&K 8 Input LAN Expander (UniBus Host) 996515PCB&K UniBus 8 Relay Expander 996515PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus 8 Relay Expander 996008 Inovonics RF Expander  996008 Inovonics RF Expander		
Sifer   Sife		
Card Readers & Cards  994200 OSDP-Wiegand Converter Device  994720 SIFER Smart Card Reader  994720 SIFER Smart Card Reader  994725 SIFER Keypad/Smart Card Reader  994725 SIFER Keypad/Smart Card Reader - Multi-Format Version  994725 SIFER Keypad/Smart Card Reader  994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version  994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards  994830 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed)  994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags  994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996515PCB&K UniBus 8 Relay Expander  996525 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994200 OSDP-Wiegand Converter Device 994720 SIFER Smart Card Reader 994720 SIFER Smart Card Reader 994725 SIFER Keypad/Smart Card Reader - Multi-Format Version 994725 SIFER Keypad/Smart Card Reader - Multi-Format Version 994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Reypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards 994580 SIFER-P ECOLITE ISO CARD (Pre-programmed - Printed) 994580 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed - Printed)  SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed - Printed)  SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed - Printed)  Input & Output Expanders 996005PCB&K 8 Input LAN Expander (UniBus Host) 996500PCB&K UniBus 8 Input Expander 996515PCB&K UniBus 8 Relay Expander 99654DPCB&K UniBus 8 Relay Evator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 - LAN Isolator PCB & Kit		
994720 SIFER Smart Card Reader 994720MF SIFER Smart Card Reader – Multi Format Version 994725 SIFER Keypad/Smart Card Reader 994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version 994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards 994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands 994621P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders 99605PCB&K 8 Input LAN Expander (UniBus Host) 99605PCB&K UniBus 8 Input Expander 996500PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus 8 Relay Expander 996505 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices 995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994720MF SIFER Smart Card Reader – Multi Format Version 994725 SIFER Keypad/Smart Card Reader 994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards 994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders 99605PCB&K 8 Input LAN Expander (UniBus Host) 996500PCB&K UniBus 8 Relay Expander 996515PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus Elevator Interface  Wireless Expanders 995025 Paradox RF Expander  1AN Management Devices 995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994725 SIFER Keypad/Smart Card Reader 994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards SIFER ISO Cards 994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed) SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed) SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed) Input & Output Expanders 99605PCB&K 8 Input LAN Expander (UniBus Host) 996500PCB&K UniBus 8 Relay Expander 996515PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus Elevator Interface Wireless Expanders 996008 Inovonics RF Expander  LAN Management Devices 995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994725MF SIFER Keypad/Smart Card Reader - Multi-Format Version 994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards  994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags  994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus 8 Relay Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994750AU SIFER Card Programing Station for SIFER-U Cards  SIFER ISO Cards  994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed)  994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags  994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Relay Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
SIFER ISO Cards  994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed)  994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags  994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994580 SIFER-P ECOLITE ISO CARD (Pre-programmed – Printed) 994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags 994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994610 SIFER-P DESFire® EV2 4K ISO - (Pre-programmed)  SIFER Tags  994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
SIFER Tags  994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
994621P SIFER-P TAG DESFire® EV2 4K ISO (Pre-programmed – Printed)  SIFER Wristbands  994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
SIFER Wristbands 994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed) Input & Output Expanders 996005PCB&K 8 Input LAN Expander (UniBus Host) 996500PCB&K UniBus 8 Input Expander 996515PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus Elevator Interface Wireless Expanders 996008 Inovonics RF Expander  996008 RS-485 – LAN Isolator PCB & Kit		
994625P SIFER-P WRISTBAND Black DESFire® EV2 4K ISO (Pre-programmed – Printed)  Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  996025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
Input & Output Expanders  996005PCB&K 8 Input LAN Expander (UniBus Host)  996500PCB&K UniBus 8 Input Expander  996515PCB&K UniBus 8 Relay Expander  996540PCB&K UniBus Elevator Interface  Wireless Expanders  995025 Paradox RF Expander  996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
996005PCB&K 8 Input LAN Expander (UniBus Host) 996500PCB&K UniBus 8 Input Expander 996515PCB&K UniBus 8 Relay Expander 996540PCB&K UniBus Elevator Interface Wireless Expanders 995025 Paradox RF Expander 996008 Inovonics RF Expander  LAN Management Devices 995080PCB&K RS-485 – LAN Isolator PCB & Kit		
996500PCB&K         UniBus 8 Input Expander           996515PCB&K         UniBus 8 Relay Expander           996540PCB&K         UniBus Elevator Interface           Wireless Expanders         995025           996008         Inovonics RF Expander           LAN Management Devices         995080PCB&K           995080PCB&K         RS-485 - LAN Isolator PCB & Kit		
996515PCB&K         UniBus 8 Relay Expander           996540PCB&K         UniBus Elevator Interface           Wireless Expanders         995025         Paradox RF Expander           996008         Inovonics RF Expander           LAN Management Devices         995080PCB&K         RS-485 – LAN Isolator PCB & Kit		
996540PCB&K         UniBus Elevator Interface           Wireless Expanders         Paradox RF Expander           995025         Paradox RF Expander           996008         Inovonics RF Expander           LAN Management Devices         Paradox RF Expander           995080PCB&K         RS-485 – LAN Isolator PCB & Kit		
Wireless Expanders           995025         Paradox RF Expander           996008         Inovonics RF Expander           LAN Management Devices         PS-485 – LAN Isolator PCB & Kit		
995025         Paradox RF Expander           996008         Inovonics RF Expander           LAN Management Devices         PS-485 – LAN Isolator PCB & Kit		
996008 Inovonics RF Expander  LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
LAN Management Devices  995080PCB&K RS-485 – LAN Isolator PCB & Kit		
995080PCB&K RS-485 – LAN Isolator PCB & Kit		
995081   RS-485 – Fiber Modem (Multi Mode)		
* ************************************		
995087 RS-485 – Fiber Modem (Single Mode)		
995093 CLOE – RS-485 LAN Over Ethernet Converter		
995910 RS-485 – LAN HUB PCB - 9 Way with DET+ & 0V HUB		
995911 RS-485 – LAN Hub PCB - Breakaway version		
995914 Power Distribution HUB PCB (32 Way DET+ & DET 0V)		
995915 RS-485 – LAN HUB PCB - Mini 8 Way Version		
Non-Powered Enclosures to Suit Inception Controller		
995201NA Medium Enclosure 14.10" L x 18.12" W x 3.35" H (358mm L x 460mm W x 85mm H)		
995204 Widebody Enclosure 20.17" L x 23.43" W x 3.74" H (512mm L x 595mm W x 95mm H)	1)	
Powered Enclosures to Suit Expansion Modules		
995201PSNA3 Medium Enclosure with 3A SMART Power Supply 14.1" L x 18.12" W x 3.35" H (358mm L x 460mm W x 85mm H)	Medium Enclosure with 3A SMART Power Supply 14.1" L x 18.12" W x 3.35" H (358mm L x	
Power Supply PCB's		
996091PCB&K 3A SMART Power Supply PCB & Accessories		



Inception Controller 996300NA



# Specifications


Case Material:	ABS plastic
Dimensions:	8.08" L x 3.75" W x 1.42" H (205mm L x 95mm W x 36mm H)
Shipping Weight (gross):	2.7 lb (1.2 kg)
Installation Environment:	32° to 122° F (0° to 50° C) @ 15%–90% relative humidity (non-condensing)
Power Source: - To "DC IN" (recommended):	18V to 24VDC 2.5A (e.g. the supplied 24V 2.5A PSU)  Note: A 12V, SLA Battery of 7AH to 18AH capacity must be connected to 'BATT' input.
- To "BATT" (alternate method):	12.8V-14VDC 2.8A (e.g. a separate external battery-backed power supply)  Note: "DC IN" should not be connected when powered via the BATT connection
Battery (supplied separately):	12 Volt Sealed Lead-Acid (gel) type - 7 to 18 Amp-Hour
Idle Current Consumption: - DC IN: (24V DC) - BATT: (DC IN = 0V)	Note: Does not include battery charging or current required by any peripheral devices. 60mA (85mA with Ethernet connected) 110mA (150mA with Ethernet connected)
Additional Current Required For:	(a) (a) (b) (c) (c) (c) (c) (c) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d
<ul> <li>Built-in Relays: (out 1 ~ out 4)</li> <li>Inception WiFi Adapter:</li> <li>Inception 4-Port USB Hub:</li> </ul>	25mA per relay (33mA when Controller powered from "BATT" input) 25mA (40mA when Controller powered from "BATT" input) 20mA (40mA when Controller powered from "BATT" input) Not including current required by any device connected to a USB Port
Power Supply Outputs: - V OUT (4-PIN): - V OUT (2-PIN): - LAN +: - READER +: - USB 2.0: - Maximum Combined Current - All Outputs	See notes 1 & 2 below 13.4VDC +/-150mV 750mA max 13.4VDC +/-150mV 1.5A max 13.4VDC +/-150mV 350mA max 13.4VDC +/-150mV 1A max 5VDC 500mA max 2.5 A
Battery Charger Output Voltage:	13.75VDC / Output Current: Up to 500mA
Typical Battery Backup Time: - 7AH Battery: - 18AH Battery: - 18AH Battery:	With Ethernet or Wi-Fi + 1 LCD Terminal + up to 200mA for other devices.  16 Hours 40 Hours 24 Hours Configuration as above but up to 500mA for other devices.
AC Fail Detect (on "DC IN"):	16.5VDC / Low Battery Detect (on "BATT" input): 11.0VDC
Output Fuses:	Individual PTC protection – self-resetting
Battery Input Fuse:	7A onboard fuse – non-replaceable
Battery Deep Discharge Protection	Activated: 10.4V / Restored: 12.5V
Zone Inputs:	8
Relay Outputs:	4 ("OUT1-4")
Relay Contact Rating:	5A 30VDC or AC (See note 2 below)
Indicator LEDs:	11 =
Alarm Reporting Formats:	ContactID or IR-fast via SkyTunnel)

#### NOTES

- 1. Please refer to the respective product data sheets for details of power supply current requirements of the accessories and expansion modules that may be powered from the Inception controller power supply.
- 2. A separate external battery-backed power supply may be required for devices connected to the Inception controller if the current required is in excess of the maximum current allowed for that output, or causes the maximum combined output current specification to be exceeded.



For more information, visit www.innerrange.com/inception. There you will find installation guides and videos to help you get the most out of your Inception system.

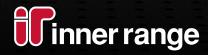

2301 Patriot Blvd Glenview, IL, 60026, USA T: +1 844-588-0874 E: amer.sales@innerrange.com W: innerrange.com